Lost Vape Thelema Q200 Pro

Originální manuál výrobce (PDF)

Český návod k použití a nastavení

Ovládání, plnění, cartridge a řešení potíží krok za krokem v češtině najdete na našem webu:

e-vapo.cz/navody/lost-vape-thelema-q200-pro/


Na dalších stranách je originální manuál od výrobce. Se zařízením i výběrem e-liquidu vám rádi poradíme na prodejně v Litoměřicích (Pokratická 2240), na telefonu +420 733 490 790 nebo e-mailem team@e-vapo.cz.

LOST VAPE

www.lostvape.com

linktr.ee/lostvapetech

LOST VAPE

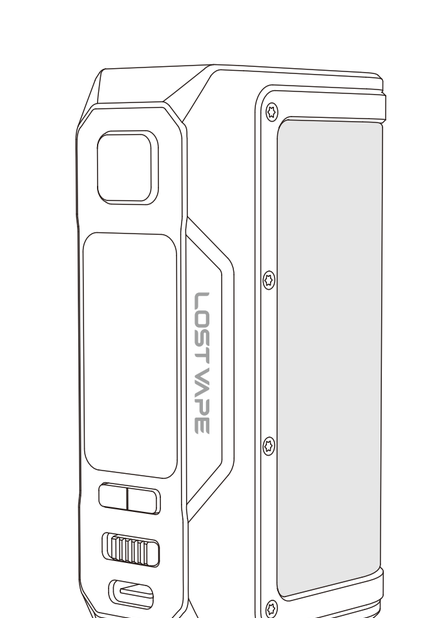

THELEMA Q200 PRO BOX MOD

USER MANUAL

SAFETY WARNINGS

1.Warning for vulnerable consumer groups: This product is not recommended for minors, pregnant or breastfeeding women, or anyone at risk of heart disease, depression, and asthma.

2.Battery Caution:

>Make sure the battery is undamaged and completely wrapped.

>Get batteries only from specialized shops and always use matched battery pairs.

>Do not sub-ohm vaping without high-discharge(>25A) battery.

>Do not expose the device to extreme temperatures.

>Do not disassemble the device without Lost Vape's recommendation.

3.Tank Attention: Do not dry burn the tank or coil. It is essential to prime a new coil. Fill your tank with e-liquid and leave it to stand for at least 5 minutes before vaping. As above, this will allow the cotton inside your new coil to absorb plenty of e-liquid ready for that first, tasty vape. All cartridges/coils are not covered under warranty once they are opened, used, or filled with liquids.

4.Warranty: The device is covered by a 3-month warranty from the date of purchase.

5.Contacts: For further questions or inquiries, please contact Lost Vape by email at support@lostvape.com or visit our website: www.lostvape.com.

PRODUCT DESCRIPTION

BASIC PARAMETERS

Dimension	28*57*92mm
Net Weight	150±5g
Battery	Dual 18650 Battery (Not Included)
Battery Voltage	6.0V-8.4V
Power Range	5-200W
Coil Resistance Supported	0.1Ω-3.0Ω
Charging Voltage	5V/2A
Type-C Cable	Support 5V/2A Charger
Display Size	1.47" TFT Display Screen
Material	Zinc-Alloy & PU Leather

UI DISPLAY OVERVIEW

Left Battery Level; Right Battery Level; Vaping Mode (WATT / BOOST / SS316 / TI / NI / VOLTAGE); Wattage; Voltage; Puff Counter; Puff Time; Resistance

*This UI display shows the default WATT mode.

ENGLISH

COMPONENTS OVERVIEW

510 Connector; Fire Button; 1.47" TFT Display Screen; Battery Cover; Right/ "+" Button; Left/ "-" Button; Switch Button; Type-C Port

BASIC OPERATION

INSTALL BATTERY

1. Remove the battery cover.
2. Insert 2x18650 batteries according to the positive and negative symbols on the tray.
3. Place the battery cover back onto the device.

TURN ON/TURN OFF

Push the Switch Button to the right to turn on the device, and push it to the left to turn it off.

FUNCTION OPERATION

Press the Fire Button 3 times to access the Primary Menu. Use the Right (+) / Left (-) buttons to choose the functions and press the Fire Button to confirm.

ENGLISH

Professional — Select your preferred vaping mode (WATT / BOOST / SS316 / TI / NI / VOLTAGE).

Theme — Switch between 9 interface themes using the Right (+) / Left (-) buttons.

Brightness — Brightness: Level 1–5 (default: 3). Press "+" to increase and loops back to 1 after 5. Press the Fire Button confirm to return.
Screen Time: 3–30s (default: 20s). Press "-" to increase and loops back to 3s after 30s. Press the Fire Button confirm to return.

ENGLISH

Clear — Reset the puff count.

Power Lock — Lock or unlock the power using the Right (+) / Left (-) buttons.

Reset — Restore factory settings using the Right (+) / Left (-) buttons.

*Tip: In any Primary Menu / Secondary Menu, long press Fire Button for 1.5 seconds to return directly to the Main Interface.

ENGLISH

VAPING MODE SWITCH

Press the Fire Button three times to enter the Primary Menu and select the "Professional" option. Press the Fire Button to confirm and access the Secondary Menu for vaping modes (WATT / BOOST / SS316 / TI / NI / VOLTAGE). Use the Right (+) / Left (-) buttons to choose your desired vaping mode, then confirm by Fire Button and return to the main interface, where the selected mode and previously adjusted parameters are displayed.

1) WATT MODE

· **Power Adjustment Range: 5W-200W.**

·Short press the Right(+)/Left(-) button to increment/decrease power by step (The Incremental/decreased steps: 0-20W 0.1W, 20W-100W 0.5W, 100W-200W 1W); long press for rapid incrementation /decrement.

When it reaches the max. power limit, stop pressing the button to retain at max. power value. Short press the button again to return to min. power value.

2) BOOST MODE

Power adjustment works like WATT mode, but unleashes a power burst for stronger, faster, and more intense vaping.

3) SS316/TI/NI TEMPERATURE CONTROL MODE

· **Temperature Range: 100–315°C or 200–600°F, with automatic unit switching.**

· Each mode allows independent temperature adjustments, while the output power remains fixed.

· Short press the Right (+) / Left (-) button to adjust in 5°C or 5°F increments; long press for rapid changes until the limit is reached. Upon release, pressing the button cycles to the minimum value of the alternate unit.

4) VOLTAGE MODE

· **Voltage Adjustment Range: 0.7V-8.0V.**

· Short press the Right(+)/Left(-) button to increment/decrease Voltage by 0.1V step. Long press for rapid adjustment. When it reaches the max. voltage limit, stop pressing the button to retain at max. voltage value. Short press the button again to return to min. voltage value.

LOCKED/UNLOCK

Long press the Right (+) and Left (-) buttons for 2s on the Main Interface simultaneously, or access the Primary Menu and select "Power Lock" to lock/unlock the power. The Fire Button remains functional in this mode.

PUFF TIME / PUFF COUNT

· Puff time is displayed after each vaping session.

· The puff count displays up to 9999. Access the Primary Menu and select "Clear" to reset the puff count.

ENGLISH

CHARGING

· Vaping via the Fire Button is allowed while charging.

· The left battery icon represents the left battery level, while the right icon corresponds to the right battery. Pressing the Fire Button / Left (-) / Right (+) during charging will bring up the Main Interface.


WARNING DESCRIPTION

LOW BATTERY	When one battery level drops to 0%, the output is automatically cut off.
CHECK ATOMIZER	The atomizer is undetected.
SHORT CIRCUIT	The atomizer is short-circuit.
TOO HOT	The internal board temperature exceeds 85°C and the output automatically shuts off. The device will resume functionality once the temperature drops to 65°C.
OVER 10S	The vape time is exceeded.

ENGLISH

LOST VAPE

LOST VAPE

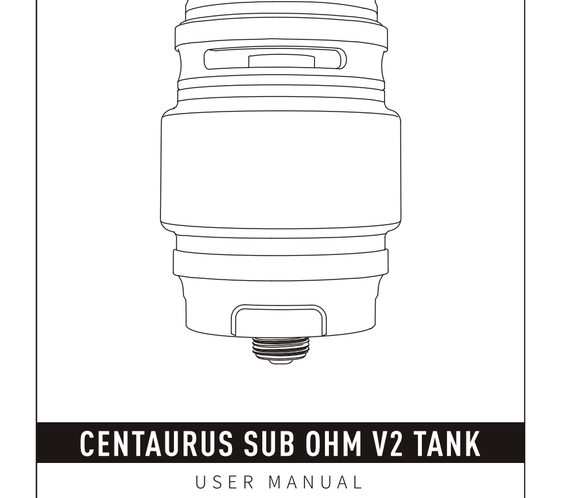

CENTAURUS SUB OHM V2 TANK

USER MANUAL

www.lostvape.com

linktr.ee/lostvapetech

SAFETY WARNINGS

1. Warning for vulnerable consumer groups: This product is not recommended for minors, pregnant or breast-feeding women or anyone at risk of heart disease, depression and asthma.

2. Atomizer Caution: Don't over-tighten the atomizer onto the 510 connector, the atomizer should be snuggled, not tightened. Over-tightening may cause damage to the threading and the Delrin insulator.

3. Warranty: The device is covered by a 3-month warranty from the date of purchase.

4. Contacts: For further questions or inquiries, please contact Lost Vape at support@lostvape.com or visit our website:www.lostvape.com.

BASIC PARAMETERS

Size	φ30.0*58.5mm(5ml) φ26.8*58.5mm(3ml)
Tank Capacity	5ML (2ml for all TPD versions)
Body Material	SUS303,GLASS TUBE
Compatible With UB Max Coils	UB MAX X1 Coil V2 Edition (0.15Ω)
	UB MAX X2 Coil V2 Edition (0.2Ω)
	UB MAX X3 Coil V2 Edition (0.3Ω)

PRODUCT DESCRIPTION

Childproof Lock; Airflow Control; Chamber; Mesh Coil; Silica Glass; Base; Gold Plated Positive Pin; 810 Drip Tip; Top Fill Chimney

ENGLISH

BASIC OPERATION

FILLING THE E-LIQUID

1. Press and hold the Childproof Lock while turning counterclockwise to open the top cover.
2. Fill the pod tank through the e-liquid filling slot.
3. Replace the top cover and turn clockwise to secure it.
4. Wait 5 minutes after filling before using the device.

INSTALL THE COIL

1. Twist the pod tank out from the base.
2. Take out the coil.

ENGLISH

3. Push the coil back into the pod tank.
4. Twist the pod tank back onto the base of the airflow control base.

FOR AIRFLOW CONTROL MODE

Turn the Airflow Control ring all the way to the right for airflow restricted, select your preference and enjoy.

ATTENTION

1.When installing a new coil, let the tank stand for 5 minutes after filling so the cotton can be fully saturated with e-liquid before use.

2.Do not let the tank become completely empty when using.

3.Refill the tank to avoid dry burning or damage to the coil.

4.Make sure the pod tank is upside down before pulling out the coil when there is juice still left in the pod tank to avoid leakage of the e-liquid.

ENGLISH